

Important Operating Instructions and Warranty Information On Your New Electronic AMSEC Safe

MODELS:

BF912, FS712E5LP, FS914E5LP, FS149E5LP, FS1814E5, WFS149E5LP

Read Contents Carefully For Trouble-Free Operation of Your Safe

Dear Valued Customer:

Congratulations on your purchase of the finest safe from American Security Products, Co.

You've taken an important step in organizing and protecting your most valued possessions. Every AMSEC safe is professionally hand-crafted and designed to provide a lifetime of trouble-free performance.

AMSEC offers the industry's finest warranty backed by a nationwide network of highly skilled authorized dealers, providing prompt, courteous, and professional service. We suggest that you read the Limited Warranty thoroughly, and invite you to contact your authorized AMSEC dealer or AMSEC's Service Department if you have any questions.

Please also take the time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, Congratulations and Thank You for selecting AMSEC!

If you like us to send AMSEC Safe information to a friend or have any questions concerning our complete line of security products, please send your request to:




**AMERICAN SECURITY
PRODUCTS COMPANY**
11925 Pacific Ave
Fontana, CA 92337

Visit us on the web at:
www.amsecusa.com

Each AMSEC safe is professionally hand-crafted with quality materials and is equipped with a precision-quality, digital lock. To become familiar with the lock, operate the lock (as outlined below) several times before closing the door and locking the safe.

OPERATION INSTRUCTIONS:

- Don't slam the door. Extreme shock can damage the lock or jam the boltwork.
- Don't shut the door with the boltwork in the locked position. Damage to the boltwork and marring the safe's finish may result.
- Don't stack contents of the safe so that the door must be forced shut. Jamming of the boltwork may result.
- Don't store the combination card inside the safe.
- Don't use oil, grease or any other lubricant on the digital lock.
- Keep all moving parts clean and free from obstruction, water and grease.
- If you experience a difference in the feel of the operation, inconsistency or difficulty opening or operating the safe, DO NOT LOCK THE SAFE. Immediately contact the security store from whom you purchased the safe. If this is not practical, contact the AMSEC service department at 951-685-9680, Ext. 1036.

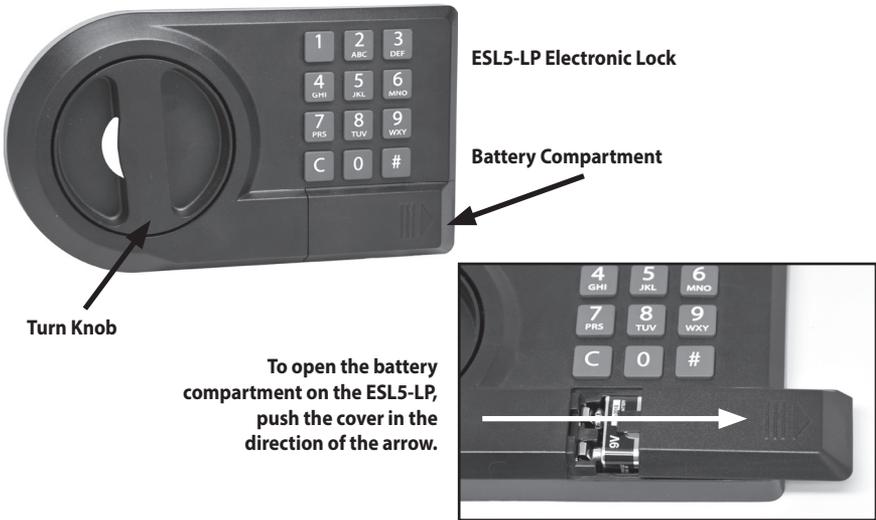

OPERATING INSTRUCTIONS FOR THE ESL5-LP ELECTRONIC SAFE LOCK

Your AMSEC ESL5-LP Electronic Safe Lock has a Factory Combination of **C-1-2-3-4-5-6-#**

To open the lock, simply press the "C" key to clear and wake up the electronics. Now press the keys of the combination one at a time and finish with the "#" key. If the combination keyed is correct, the lock will cycle open for three (3) seconds. During this 3 second period, turn the handle or knob to the unlocked position and pull the door open.

You may change your combination any time you like, and as many times as you like. Once your safe is installed, you must change the combination to a number sequence other than the Factory Combination of 1-2-3-4-5-6 to insure the safety of your valuables.

Here are a few things to remember:

- a. With each keystroke the keypad lights will flash off and a chirp will be heard, unless Stealth Mode is on, then no sounds are emitted during lock opening.
- b. If 4 (four) incorrect combinations are entered, the lock will go into a "Penalty Lockout" for 15 minutes to prevent trial and error manipulation attempts at opening the lock. The keypad will flash once every 5 seconds during the penalty period. If you press any key during the lockout period, the keypad will flash with a chirp 8 times rapidly to indicate the lockout condition.
- c. Before keying the combination, be sure that the handle of the safe is in the fully locked position to allow the lock to open freely.
- d. If the lock fails to open or acts strange, replace the battery with a good quality fresh 9 volt alkaline battery. To replace the battery, simply turn the keypad housing counter-clockwise to the stop and pull it away from the base. Un-snap the old battery and clip on the new one. Position the battery it in the pocket of the housing and replace the keypad, watching that the wires fold neatly inside and are not pinched. You should replace your battery once a year to prevent corrosion damage from leakage.
- e. During the input sequence, if you make a mistake, you can press "C" to clear the previous input and start over again.
- f. The ESL5-LP uses a fixed length 6 (six) digit combination.
- g. Use only your fingers to key the combination. Sharp objects will result in damage which is not covered by warranty.
- h. If at any time during opening, or combination changing, the unit is left without input for 10 (ten) seconds, it returns to a resting condition. If this occurs during a combination change, the Old Combination is retained.
- i. At any time during opening or combination changing the unit will register the first 5 digits of the combination into the "buffer" that receives input. The 6th digit will be the last numeric key pressed. For example, if your press **C-1-2-3-4-5-7-4-5-2-7-6-#** the program recognizes only the C-1-2-3-4-5-6-# input. The last numeric key pressed continues to replace the one prior until the "#" key is pressed to indicate completion. This is a security feature that allows you to baffle an on-looker that may be trying to memorize your combination.

Quiet Mode –Silent Operation

The ESL5-LP Lock provides a Stealth Mode you can program so the Beeper remains silent during normal lock opening operation. To turn Stealth Mode ON (silent) or OFF (beeping):

ON: Press C-# (short warble tone), then 8-0-# (short warble), then 1-# (long warble).

OFF: Press C-# (short warble tone), then 8-0-# (short warble), then 0-# (long warble).

Combination Changing Instructions for the ESL5-LP Electronic Safe Lock

-- CAUTION --

Combination changes should always be done with the door locked OPEN.

To change the combination, do the following:

- a. Press the keys "C" and then "#". The unit responds with a short warbling tone (called the "good combo tone") and the keypad lamps strobe with the tone.
- b. Now key in the old 6 digit combination. The "C" key may be used to clear an error in keying at any time. Finish the input with a "#" key.
 1. If the old combination keyed matches the existing combination in permanent memory, another short good combo tone is sounded. Proceed to "c"
 2. If the combination keyed is incorrect, the unit responds with 4 short beeps (called the bad combo tone) and returns to rest. The combination change routine is aborted and the old combination is retained. This also causes a count up for Penalty Lockout.
- c. Now key the first pass with the New 6 digit combination followed by a "#" key. Again, the "C" key may be used to clear an error in keying at any time.
 1. If the combination input is 6 digits in length, another short good combo tone is sounded. Proceed to "d."
 2. If the combination keyed is not 6 digits long, the unit responds with 4 short beeps (bad combo tone) and returns to rest. The combination change routine is aborted and the old combination is retained.
- d. Now key the second (verify) pass with the New 6 digit combination followed by a "#" key. As before, the "C" key may be used to clear an error in keying at any time.
 1. If the combination input matched the first pass, a long good combo tone is sounded. The new combination replaces the old combination in permanent memory and the unit returns to a resting condition. Proceed to "e."
 2. If the combination keyed does not match the first pass, the unit responds with the bad combo tone and returns to rest. The combination change routine is aborted and the old combination is retained.
- e. **Test your new combination several times prior to closing and locking the safe.**



CAUTION!

Liquids can damage the keypad

Limited Product Warranty

LIMITED WARRANTY—SECURITY SAFES & ELECTRONIC PRODUCTS

Product Category

Duration of Warranty

(Beginning from date of first consumer purchase / Proof of purchase necessary)

All Safes and related components 1 Year Parts & Labor

Electronic Locks and related components 1 Year Parts & Labor

What is covered and what is not covered:

This warranty covers all defects in materials or workmanship in this product, but DOES NOT COVER:

- (1) Damage, deterioration or malfunction resulting from:
 - a. Accident, negligence, misuse, abuse, improper installation, failure to perform normal maintenance or operation to follow instructions labeled on or provided in the safe.
 - b. Any damage occurred from shipment. (Claims must be presented to the carrier)
 - c. Repair or attempted repair by anyone other than a pre-authorized AMSEC service dealer.
- (2) Any unit which has been altered or on which the serial number has been defaced, modified or removed.
- (3) Normal wear, battery replacement, any periodic maintenance or where combination lock has been changed without factory authorization.

Who may enforce the warranty:

This warranty is only enforceable by the original purchaser.

What we will pay for and what you must pay for:

AMSEC will repair or replace units covered by this warranty, without charge to the consumer for labor and materials. YOU ARE RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND FOR ANY SHIPPING CHARGES. State sales tax does not apply to warranty service work and will not be honored. If safe components must be shipped for warranty service, AMSEC will pay the shipping charges to any destination within the USA if the repairs are covered by the warranty. Defective parts must be returned (not repaired unless instructed) to AMSEC. If parts are not returned, the warranty invoice will be denied.

How you can get warranty service:

- (1) If your AMSEC safe requires service, contact your local authorized AMSEC dealer and the dealer will advise you of the procedures to be followed. If this is not practical, contact the AMSEC Service Department at the address on front cover or call 951-685-9680, ex. #1036.
- (2) All warranty service must have prior authorization, accompanied by proof of purchase as evidence of warranty coverage. A warranty authorization number must be obtained from AMSEC before any service work is performed. The serial number, description of product and description of problem must be supplied to AMSEC to determine warranty status before an authorization number will be assigned. Issuance of the authorization number recognizes only the existence of the problem and does not constitute an admission of liability by AMSEC. Only approved service representatives will be authorized to perform warranty service. Any service performed prior to issuance of a warranty authorization number will be subject to denial.

Limitation of Implied Warranties:

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

Exclusions of Damages:

AMSEC's liability for any defective products is limited to repair or replacement of the product, at our option.

AMSEC shall not be liable for damages based upon inconvenience, loss of use, damage or loss of contents, or any other damages whether incidental, consequential or otherwise.

PURCHASE RECORD

Model #: _____
Serial #: _____
Date of Purchase: _____
Purchased From: _____
Company: _____
Address: _____
City _____ **State** _____ **Zip Code** _____
Telephone #: _____
Email Address: _____
Website: _____

**RECORD YOUR COMBINATION AND KEY NUMBERS HERE
(STORE IN A SAFE PLACE)**

Personal Combination:

_____	_____	_____
One	Two	Three
_____	_____	_____
Four	Five	Six

Key Number: _____

TO OPEN

**Factory Default: Push "C" key, then enter 1-2-3-4-5-6.
Push "#" key. Turn knob to open.**

TO LOCK

1. Close the door. 2. Turn knob to locked position